CFD

1) Install SirclePOS CFD on your second tablet from the play store.



2) Open SirclePOS CFD on your second tablet and enter your Log in and password.



3) On your POS tablet, open SirclePOS/Smart360 and go into the settings. Click hardware setup, Second Display, and Select "Sircle POS CFD"

			4	🔋 70% 🖹 12:31 PM
Printer Setup				
Cash Drawer Setup				
Second Display				
	Second Display			
	None	۲		
	Partner Tech	0		
	Sircle POS CFD	0		

4) Enter the IP address of the Second tablet into the POS tablet. To find this go into CFD tablet settings, About Device, and Status.

